

SVEN[®]
YOU WANT – WE CAN

PC Wired Gamepad

USER'S MANUAL



SCOUT

www.sven.fi

Congratulations on the purchase of the Sven product!

Please read this User's Manual before using the unit and retain this User's Manual in safe place for future reference.

COPYRIGHT

© 2014. SVEN PTE. LTD. Version 1.0 (V 1.0).

This User's Manual and information contained in it are copyrighted. All rights reserved.

TRADEMARKS

All trademarks are the property of their legal holders.

NOTICE OF RESPONSIBILITY RESTRICTION

Despite the exerted efforts to make this Manual more exact, some discrepancies may occur. The information of this Manual is given on "as is" terms. The author and the publisher do not bear any liability to a person or an organization for loss or damages which have arisen from the information, contained in the given Manual.

UNPACKING

Unpack the device carefully. Make sure there are no accessories left in the box. Check up the device for damages; if the product was damaged during transportation, address the firm which carried out the delivery; if the product functions incorrectly, address the dealer at once.

CONTENTS

1. DESCRIPTION	2
2. SAFETY PRECAUTIONS	2
3. PACKAGE CONTENTS	2
4. SPECIAL FEATURES	2
5. SYSTEM REQUIREMENTS	2
6. DESCRIPTION OF THE CONSTRUCTION	3
7. CONNECTION AND INSTALLATION	4
8. TROUBLESHOOTING	4

1. DESCRIPTION

Sven SCOUT PC Wired Gamepad can be used in different games such as simulators, arcades, shooter games etc. Ergonomic construction of SCOUT enhances accuracy of its operation during games.

2. SAFETY PRECAUTIONS

- Do not disassemble or repair the device on your own. Maintenance and repairs should be carried out by qualified service centre staff only.
- Protect the device from direct impact of high humidity, dust, strong magnetic fields, vibrations, high temperatures, toxic liquids and gases.
- Instructions for device maintenance: for cleaning the case of the device please use clean soft cloth. Do not use such solvents as gasoline or spirit for cleaning, since these solvents can damage the surface of the device.
- Do not drop the device to avoid damaging it.

3. PACKAGE CONTENTS

- Gamepad — 1 pc
- Operation manual — 1 pc
- Warranty card — 1 pc

4. SPECIAL FEATURES

- Ergonomic design of the gamepad
- Supports DirectX 5.0 and up, Windows XP/Vista/7/8
- USB Interface
- Turbo function for continuous firing
- D-Pad, 12 buttons

5. SYSTEM REQUIREMENTS

- USB port available
- Windows XP/Vista/7/8 Operational System
- DirectX 5.0 Version and up

5. DESCRIPTION OF THE CONSTRUCTION

- ① D-pad
- ② Power LED
- ③ USB cable
- ④ Button 10
- ⑤ Buttons 1–4
- ⑥ Button 9
- ⑦ CLEAR: TURBO mode cancellation button
- ⑧ TURBO: TURBO mode turn on button
- ⑨ Button 6
- ⑩ Button 8
- ⑪ Button 5
- ⑫ Button 7

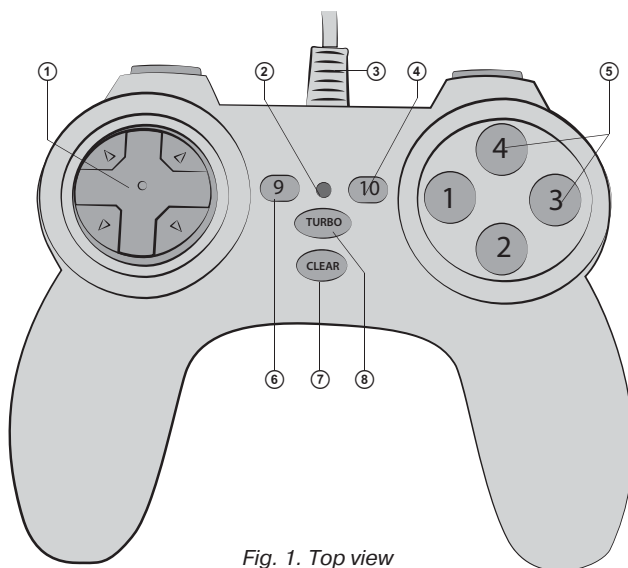


Fig. 1. Top view

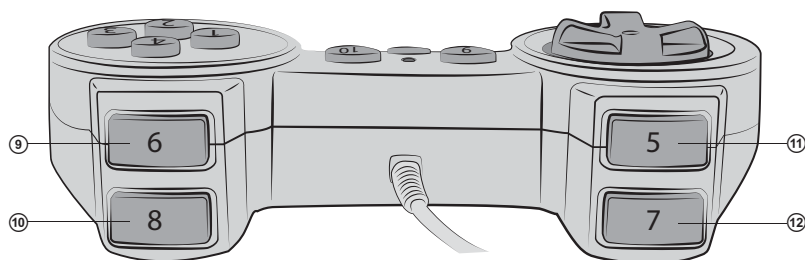


Fig. 2. Rear view

7. CONNECTION AND INSTALLATION

- Connect the gamepad via USB cable ③ to an available USB port of your PC. After connection to your PC, the device is automatically detected as a game controller and is fully ready for use.
- For testing the game controller choose «Панель управления» → «устройства и принтеры» (Control Panel → Devices and Printers), right-click on the icon and go to the gamepad settings.
- TURBO function (for continuous shooting).

Turbo function imitates multiple pressing and holding of any button, while it was pressed only once. To activate this function, press any button 1-10, hold it and press TURBO button ⑧. Now this button will have Turbo function set up. To cancel this function, press the button programmed with Turbo function, hold it and press CLEAR button ⑦.

8. TROUBLESHOOTING

Problem	Solution
After installation of the software, the game controller does not work normally.	<p>A. Check whether the link cable of the controller is strongly connected to the PC.</p> <p>B. Make sure that you have installed the drivers and confirmed the installation.</p> <p>C. Check whether the settings of the controller have any conflicts with other peripherals' settings.</p> <p>D. Restart your PC, if the controller still doesn't work normally.</p>
The driver can't be installed or it doesn't work after installation.	Direct X version is too low. It requires version of 5.0 and up.
After connecting the gamepad, its driving program can't be found.	Enter My computer → Properties → Hardware → Device manager, delete corresponding equipment with «!» mark and reconnect the gamepad to the PC. Then your PC will find the driving system.

If none of the above mentioned solutions removes the problem, please seek professional advice at your nearest authorized service center. Never try to repair the device on your own.

Игровой манипулятор

SVEN®
YOU WANT – WE CAN



Модель: **Scout**

Импортер в России: ООО «СКАНДИТРЕЛ»,
111024, РФ, г. Москва, ул. Авиамоторная, д. 65, стр. 1.

Уполномоченная организация в России: ООО «РТ-Ф»,
105082, г. Москва, ул. Фридриха Энгельса, д. 75, стр. 5.

Условия гарантийного обслуживания смотрите
в гарантийном талоне или на сайте www.sven.fi

Гарантийный срок: 12 мес. Срок службы: 2 года.

Производитель: «СВЕН ПТЕ. Лимитед»,

176 Джу Чиаг Роуд, № 02-02, Сингапур, 427447.

Произведено под контролем «Свен Скандинавия

Лимитед», 48310, Финляндия, Котка,

Котолахдентие, 15. Сделано в Китае.

Manufacturer: SVEN PTE. LTD, 176 Joo Chiat Road,
№ 02-02, Singapore, 427447. Produced under the
control of Oy Sven Scandinavia Ltd. 15, Kotolahdentie,
Kotka, Finland, 48310. Made in China.

© Registered Trademark of Oy SVEN
Scandinavia Ltd. Finland.

SCOUT