

SVEN®
YOU WANT – WE CAN

Wireless Stereo Headphones
with Microphone

OPERATION MANUAL



AP-B770MV

www.sven.fi

Congratulations on your purchase of the SVEN stereo headphones!

COPYRIGHT

© 2015. SVEN PTE. LTD. Version 1.0 (V 1.0).

This Manual and information contained in it are copyrighted. All rights reserved.

APPLICATION

SVEN AP-B770MV wireless stereo headphones with microphone are designed for operation with PC, notebooks and other mobile devices by means of data transfer via Bluetooth protocol. They can be also used in internet telephony, during video conferences, in multimedia applications, in interactive games, for speech recognition and foreign language teaching.

PACKAGE CONTENTS

- Stereo headphones – 1 pc
- Power cord USB to micro USB – 1 pc
- User's Manual – 1 pc
- Warranty card – 1 pc

SAFETY PRECAUTIONS

- Don't use the stereo headphones while driving.
- Don't use the stereo headphones at high volume for a long time (more than 15 minutes), as this may cause hearing impairment.

SPECIAL FEATURES

- 4.0 Bluetooth wireless signal transmission
- Operation time with battery up to 22 hours
- Radius of operation up to 10 m
- Track switching control possibility
- Call acceptance function

DESCRIPTION

- ① ►► : next track
- ② ►/|| : Play/Pause
- ③ ◀◀ : previous track
- ④ CHARGE: micro USB jack for battery charging
- ⑤ MIC: microphone
- ⑥ ⏻ : headphones on/off and call control button
- ⑦ V-: volume down button
- ⑧ V+: volume up button
- ⑨ LED indicator

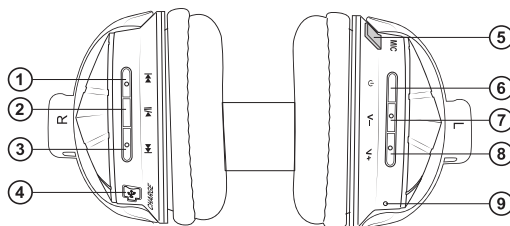


Fig. 1. Headphones description

CONNECTION AND OPERATION

Device switching on/off

- Press and hold down the button ⑥ until the battery beeps to switch on the headset. During the headphones switching on the LED ⑨ will start blinking blue color. Press once more and hold down the button ⑥ until the battery beeps to switch off the device. During the headphones switching off the LED ⑨ will blink red three times.

Control buttons

Jointly with a telephone:

- to receive an entry call press the button ⑥. Press the button ⑥ once more to finish the call ⑥;
- when the button ⑥ is pressed long (~2 sec.), the last call dialing will start;
- when the button ⑥ is pressed short (less than 2 sec.) (not in the call mode) the voice activated dialing function is activated (depending on a telephone configuration).

In the player mode:

- when buttons ③ or ① are pressed long, track/video rewinding will be started.

Headset charging

- Connect the headset to PC with the USB to micro USB cable (included). The indicator ⑨ lights red during charging.

- When the device is fully charged, the indicator will blow out.
- When the battery is low-charged, it beeps several times and the indicator ⑨ will blink red.
- The battery is used in the headphones as an integral part of the device, so do not try to remove or replace it as it can result in the warranty cancellation or to a damage of the device.

Bluetooth technology

- Wireless data transfer via the Bluetooth protocol allows connecting headphones without wiring to compatible devices. Maximum radius of action of data transfer is 10 m. Such obstacles as walls or other electronic devices can interfere with the signal transfer.

Headset to a device interface

- It is necessary first to interconnect the device with a sound source (see the connection diagram in Fig. 2) to transfer signals via Bluetooth. To do this, switch on the headset not releasing the button ⑥ while the search mode will start, LED indicator ⑨ will alternate blue light with red one.
- It is necessary to select the search mode of a Bluetooth device on a signal source (telephone, notebook, smartphone, etc.), the «AP-B770MV» name will be displayed on the screen with which connection is to be required*.
- If connection is successful, there will be a short sound signal in the headphones; the search mode indication on the headphones is over. If no devices will be connected, the search mode will be turned off automatically in three minutes and the headphones will go to the standby mode. If the interface of devices has been failed, it is necessary to switch the system in the search mode once more (switch off and on)**.

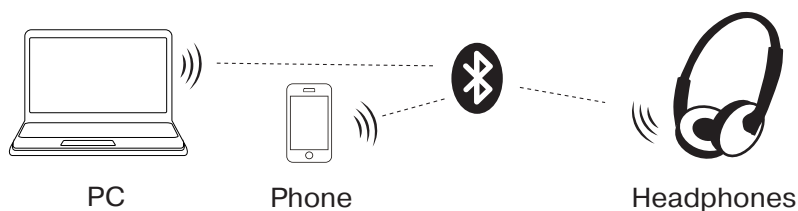


Fig. 2. Connection diagram

- The indicator ⑨ on the headphones blinks blue short during the data exchange with a device connected via Bluetooth.

* You might have to enter “0000” code to connect some models of devices via Bluetooth.

** If the item has been already registered in the device list of a source, then the second search mode activation is not obligatory. Choose only the item name and the “connect” command on the source.

TECHNICAL SPECIFICATIONS

Parameter, measurement unit	Value
Sensitivity, dB	headphones: 106 ± 2 microphone: -58 ± 2
Frequency range, Hz	headphones: 20 – 22 000 microphone: 100 – 10 000
Impedance, Ohm	32
Membrane, mm	Ø 40
Connection type	Bluetooth 4.0
Bluetooth supported profiles	HSP, HFP, A2DP, AVRCP
Radius of operation, m	10
Operation time with battery	up to 22 hours
Weight, g	210

Notes. Technical specifications given in this table are supplemental information and cannot give occasion to claims. Technical specifications are subject to change without notice due to the improvement of SVEN production.

Wireless Stereo Headphones with Microphone

SVEN®
YOU WANT – WE CAN



Модель: AP-B770MV

Импортер в России: ООО «СКАНДИТРЕЛ», 111024, РФ,
г. Москва, ул. Авиамоторная, д. 65, стр. 1.

Уполномоченная организация в России: ООО «РТ-Ф»,
105082, г. Москва, ул. Фридриха Энгельса, д. 75, стр. 5.

Условия гарантийного обслуживания смотрите
в гарантийном талоне или на сайте **www.sven.fi**

Гарантийный срок: 12 мес.

Срок службы: 2 года.

Производитель: «СВЕН ПТЕ. Лимитед»,
176 Джу Чиат Роуд, № 02-02, Сингапур, 427447.

Произведено под контролем «Свен Скандинавия
Лимитед», 48310, Финляндия, Котка,
Котolahdentie, 15. Сделано в Китае.

Manufacturer: SVEN PTE. LTD., 176 Joo Chiat Road,
№ 02-02, Singapore, 427447. Produced under the control
of Oy Sven Scandinavia Ltd. 15, Kotolahdentie, Kotka,
Finland, 48310. Made in China.

© Registered Trademark of Oy SVEN
Scandinavia Ltd. Finland.

AP-B770MV