

HEADSET USAGE with iPhone/iPod/iPad*

Function	User action
Pause during playback	Press the central button one time. Press it once more to continue playback.
Next song	Press the central button two times.
Previous song	Press the central button three times.
Current song fast forward	Quickly press the central button twice and hold it to fast forward.
Current song rewinding	Quickly press the central button three times and hold it to rewind.
Answer to incoming call	Press the central button one time.
Current call completion	Press the central button one time.
Current call reset	Press and hold the central button within 2 seconds and then release it. The beep signalizes that the current call is reset.
Switching between incoming calls and a call holding	Press the central button one time. Press it once more to switch over to a new call.
Switching to the first incoming call and the current call completion	Press and hold the central button within 2 seconds and then release it. The beep signalizes to return to the first call.

* iPhone, iPod, iPad are Trademarks of Apple Inc.