

SVEN®
YOU WANT – WE CAN

Keyboard + Mouse
Wireless Combo Set

USER'S MANUAL



**COMFORT 3200
WIRELESS**

www.sven.fi

Congratulations on your purchase of the Sven Keyboard + Mouse Wireless Combo Set!

Please read this User's Manual before using the unit and retain this User's Manual in a safe place for future reference.

COPYRIGHT

© 2014. SVEN PTE. LTD. Version 1.0 (V 1.0).

This Manual and information contained in it are copyrighted. All rights reserved.

TRADEMARKS

All trademarks are the property of their legal holders.

NOTICE OF RESPONSIBILITY RESTRICTION

Despite the exerted efforts to make this Manual more exact, some discrepancies may occur. The information in this Manual is given on «as is» terms. The author and the publisher do not bear any liability to a person or an organization for loss or damage which has arisen from the information contained in this Manual.

UNPACKING

Unpack the device carefully. Make sure there are no accessories left in the box. Check up the device for damage; if the product was damaged during transportation, address the firm which carried out the delivery; if the product functions incorrectly, address the dealer at once.

CONTENTS

1. SPECIAL FEATURES	1
2. PACKAGE CONTENTS	2
3. SYSTEM REQUIREMENTS	2
4. INSTALLATION	2
5. CONNECTION	3
6. DESCRIPTION OF SHORTCUT BUTTONS FUNCTIONS	4
7. TROUBLESHOOTING	4
8. TECHNICAL SPECIFICATIONS	4

1. SPECIAL FEATURES

- Ergonomic design of the keyboard and mouse
- Power saving wireless technology
- 2.4 GHz USB nano receiver
- Coverage range up to 10 m
- Automatic detection, no need to match the receiver with the pointing device
- High-quality keyboard membrane
- 13 Fn shortcut keys for Internet and Multimedia
- Compatible with Windows XP/Vista/7/8
- USB Interface
- Low operation noise
- Wireless mouse with 2 buttons and scroll wheel
- 1200 dpi mouse resolution

2. PACKAGE CONTENTS

- Wireless keyboard — 1 pc
- Wireless mouse — 1 pc
- 2.4 GHz USB nano receiver — 1 pc
- AAA batteries — 2 pcs
- AA battery — 1 pc
- User's manual — 1 pc
- Warranty card — 1 pc

3. SYSTEM REQUIREMENTS

- Windows XP/Vista/7/8.
- Free USB port.

4. INSTALLATION

• Open the cover of the mouse battery compartment, insert the AA battery into the battery compartment matching the polarity, and close the cover of the battery compartment (see Fig. 1).

• Open the cover of the battery compartment at the bottom of the keyboard, insert two AAA batteries matching the polarity, and close the cover of the battery compartment (see Fig. 2).



Please match the polarity when installing the batteries. Incorrect polarity can cause malfunction of the device, which gives no claims for warranty servicing.



It is necessary to always install only the same type of batteries, because installation of different types of batteries with different levels of charging can cause leaking of one of the batteries, which can damage the device.

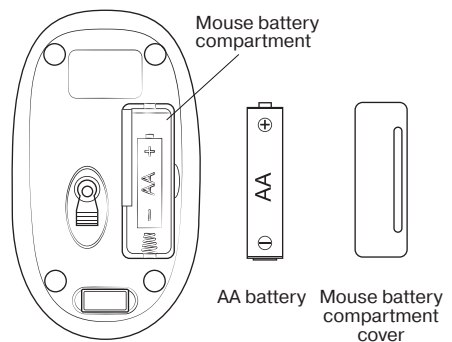 


Fig. 1

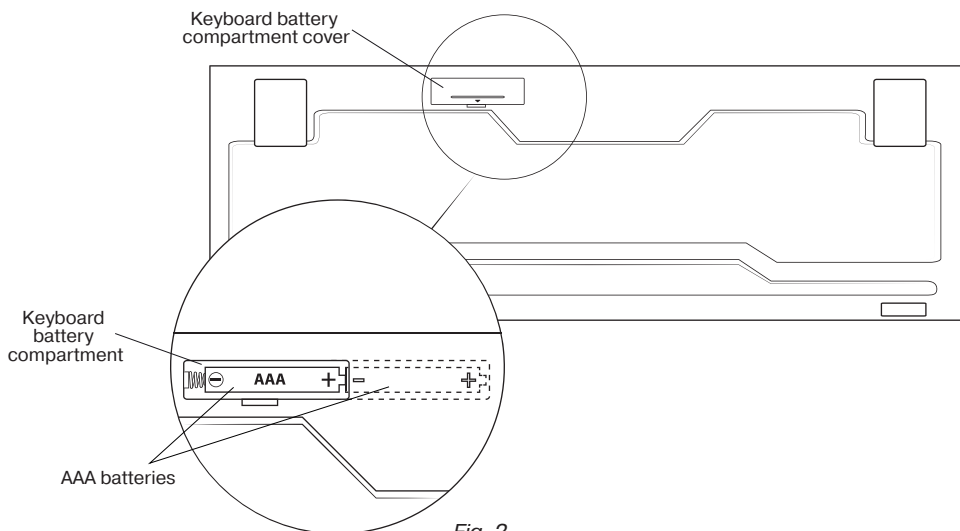 


Fig. 2

5. CONNECTION

- Connect the 2.4 GHz USB nano receiver to a free USB port of your PC.
- To activate the set, press any button of the mouse or turn the scroll wheel. If the connection is correct, the set will turn on automatically.
- After finishing your work, you can pull out the receiver from the PC USB port and insert it into the mouse as shown in Fig. 3.
- If the mouse or keyboard don't work, connect them to the nano receiver again. To reconnect the mouse to the nano receiver, press its right button and the scroll wheel at the same time and, while holding them, pull out and insert the 2.4 GHz nano receiver back into the USB port.
- To reconnect the keyboard to the nano receiver, press its «ESC» and «K» buttons at the same time and, while holding them, pull out and insert the 2.4 GHz nano receiver back into the USB port.

Notes:

- **Do not place the receiver into a confined metal space (table drawer, box, safe), as a metal screen does not transmit radio signals.**
- **If batteries run down, there are «lapses» in operation of the mouse or keyboard. In such a case replace the batteries with new ones.**
- **If there is a long pause in operation of the mouse or keyboard, they enter the Sleep mode. To enter the working mode just press any button.**

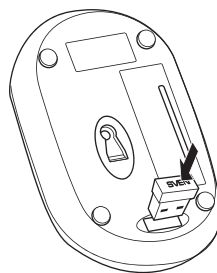 


Fig. 3

6. DESCRIPTION OF SHORTCUT KEYS FUNCTIONS

Fn + ESC: start media player	Fn + F5: volume down	Fn + F9: open My Favorites
Fn + F1: play/pause	Fn + F6: mute on/off	Fn + F10: start e-mail program
Fn + F2: go to previous track	Fn + F7: open home web page	Fn + F11: lock screen
Fn + F3: go to next track	Fn + F8: go to search page	Fn + F12: open My Computer
Fn + F4: volume up		

7. TROUBLESHOOTING

Problem	Solution
The keyboard and mouse are not working.	<ol style="list-style-type: none"> 1. Check whether the batteries have been installed correctly. If necessary, replace the batteries with new ones matching the polarity. 2. Pull out the USB receiver and insert it back, make sure that it is not damaged. 3. Reprogram the USB nano receiver using the software you can download at www.sven.fi. 4. We recommend that you address your nearest service center.

If none of the above methods can solve the problem, please seek professional advice at your nearest service center. Never attempt to repair the product yourself.

8. TECHNICAL SPECIFICATIONS

Parameter, measurement unit	Value
Q-ty of keyboard keys	105
Q-ty of shortcut keys	13 Fn
Q-ty of mouse buttons	2 + 1 (scroll wheel)
Keyboard layout	Rus/Ukr/Eng
OS compatibility	Windows XP/Vista/7/8
Interface	USB
Error-free running time	more than 20,000,000 strokes
Coverage range, m	up to 10
Mouse resolution, dpi	1200
Frequency, GHz	2.4
Keyboard dimensions (W × H × L), mm	445 × 20 × 150
Mouse dimensions (W × H × L), mm	57 × 30 × 100
Weight (keyboard + mouse), g	480 and 50

Notes:

- **Technical specifications given in this table are supplemental information and cannot give occasion to claims.**
- **Technical specifications are subject to change without notice due to the improvement of SVEN production.**

Keyboard + Mouse Wireless Combo Set



SVEN®
YOU WANT – WE CAN

Модель: **Comfort 3200 Wireless**

Импортер в России: ООО «СКАНДИТРЕЛ», 111024, РФ, г. Москва, ул. Авиамоторная, д. 65, стр. 1.

Уполномоченная организация в России: ООО «РТ-Ф», 105082, г. Москва, ул. Фридриха Энгельса, д. 75, стр. 5. Условия гарантийного обслуживания смотрите в гарантийном талоне или на сайте www.sven.fi

Гарантийный срок: 12 мес. Срок службы: 2 года.

Производитель: «СВЕН ПТЕ. Лимитед», 176 Джу Чиат Роуд, № 02-02, Сингапур, 427447.

Произведено под контролем «Свен Скандинавия Лимитед», 48310, Финляндия, Котка, Котолахдентие, 15. Сделано в Китае.

Manufacturer: SVEN PTE. LTD, 176 Joo Chiat Road, № 02-02, Singapore, 427447. Produced under the control of Oy Sven Scandinavia Ltd. 15, Kotolahdentie, Kotka, Finland, 48310. Made in China.

© Registered Trademark of Oy SVEN
Scandinavia Ltd. Finland.

**COMFORT 3200
WIRELESS**