

ENG

**USER'S MANUAL*****Congratulations on purchasing the SVEN mouse!***

Please read this User's Manual before using the unit and retain this User's Manual in a safe place for future reference.

**COPYRIGHT**

© SVEN PTE. LTD. Version 1.0 (V 1.0). This Manual and information contained in it are copyrighted. All rights

**TRADEMARKS**

All trademarks are the property of their legal holders.

**NOTICE OF RESPONSIBILITY****RESTRICTION**

Despite the exerted efforts to make this Manual more exact, some discrepancies may occur.

The information in this Manual is given on «as is» terms.

The author and the publisher do not bear any liability to a person or an organization for loss or damage which has arisen from the information contained in this Manual.

- Shipping and transportation equipment is permitted only in the original container.
- Does not require special conditions for realization.
- Dispose of in accordance with regulations for the disposal of household and computer equipment.

**SAFETY PRECAUTIONS**

- Protect your mouse from high humidity, dust or high temperatures.
- Do not use gasoline, spirit or other solvents for cleaning. This may cause damage to the surface. Clean the device

with soft cloth.

- Do not attempt to disassemble or repair your device.
- Protect the device against powerful shocks and falls — they may damage the internal electronics.

**APPOINTMENT**

KB-S320C keyboard and mouse are input devices. They are designed to enter information into the computer, as well as control the operation of the computer.

**PACKAGE CONTENTS**

- Wired Mouse — 1 pc
- Wired Keyboard — 1 pc
- User manual — 1 pc

**SPECIAL FEATURES**

- Classic layout
- Waterproof construction
- Adjustable height

**SYSTEM REQUIREMENTS**

- Windows

**CONNECTION AND INSTALLATION**

Connect the keyboard and mouse to an available USB port of your PC. Installation of the keyboard and mouse is automatic after its connection to a PC USB port.

**TROUBLESHOOTING**

Problem	Solution
The keyboard/mouse is not working.	1. Disconnect the keyboard/mouse from the PC and check connector pins for possible damage. If there is no external damage found and the connector pins are OK, connect the keyboard/mouse to the PC again. 2. Address your nearest authorized service center.

If none of the above mentioned solutions removes the problem, please consult a nearest authorized service center. Never try to repair the device on your own.



**Technical support: [www.sven.fi](http://www.sven.fi)**