

ENG USER'S MANUAL

Congratulations on purchasing the SVEN mouse!

Please read this User's Manual before using the unit and retain this User's Manual in a safe place for future reference.

COPYRIGHT

© 2019. SVEN PTE. LTD. Version 1.0 (V 1.0). This Manual and information contained in it are copyrighted. All rights reserved.

TRADEMARKS

All trademarks are the property of their legal holders.

NOTICE OF RESPONSIBILITY RESTRICTION

Despite the exerted efforts to make this Manual more exact, some discrepancies may occur. The information in this Manual is given on «as is» terms. The author and the publisher do not bear any liability to a person or an organization for loss or damage which has arisen from the information contained in this Manual.

- Shipping and transportation equipment is permitted only in the original container.
- Does not require special conditions for realization.
- Dispose of in accordance with regulations for the disposal of household and computer equipment.

SAFETY PRECAUTIONS

- Protect your mouse from high humidity, dust or high temperatures.
- Do not use gasoline, spirit or other dissolvents for cleaning. This may cause damage to the surface. Clean the device with soft cloth.

- Do not attempt to disassemble or repair your device.
- Protect the device against powerful shocks and falls – they may damage the internal electronics.

APPLICATION

RX-585SW is an input device. It is designed to input (to enter) information into PC and operate it.

PACKAGE CONTENTS

- Wireless optical mouse — 1 pc
- 2.4 GHz receiver — 1 pc
- AA battery — 1 pc
- User manual — 1 pc

SPECIAL FEATURES

- Switching DPI modes
- Rubber scroll wheel
- Plug&Play technology

SYSTEM REQUIREMENTS

- Win OS/Mac OS.
- Free USB port.

SWITCH BETWEEN MODES 2.4 GHZ AND BLUETOOTH

- Start Bluetooth device search on your PC (or another device).
- Press right and middle buttons at the same time for 3 seconds. The LED will turn on. Bluetooth mode will be activated.
- Press the blue button on the mouse bottom. LED will blink fast and pairing mode will be turned on.
- As soon as PC (or another device) finds the mouse, click "Pairing". After that the mouse will be ready for working.

To get back to 2.4 GHz mode, press right and middle buttons at the same time for 3 seconds again.

By default 2.4 GHz mode works.

TROUBLESHOOTING

Problem	Solution
The mouse is not working.	1. Disconnect the mouse from your PC and check the connector pins for possible damage. If there is no external damage found and the connector pins are OK, connect the mouse to your PC again. 2. Address your nearest authorized service center.

If none of the above mentioned solutions removes the problem, please consult a nearest authorized service center. Never try to repair the device on your own.



Technical support: www.sven.fi