

SVEN®
YOU WANT – WE CAN

2.0 Multimedia Speaker System

OPERATION MANUAL



SVEN 280

www.sven.fi

Congratulations on your purchase of the Sven speaker system!

COPYRIGHT

© 2014. SVEN PTE. LTD. Version 1.0 (V 1.0).

This Manual and information contained in it are copyrighted. All rights reserved.

TRADEMARKS

All trademarks are the property of their legal holders.

NOTICE OF RESPONSIBILITY RESTRICTION

Despite the exerted efforts to make this Manual more exact, some discrepancies may occur. The information in this Manual is given on “as is” terms. The author and the publisher do not bear any liability to a person or an organization for loss or damage which has arisen from the information contained in this Manual.

CONTENTS

1. BUYER RECOMMENDATIONS	1
2. PACKAGE CONTENTS.....	2
3. SAFETY PRECAUTIONS	2
4. TECHNICAL DESCRIPTION	2
5. PREPARATION AND OPERATION	3
6. TROUBLESHOOTING.....	4
7. TECHNICAL SPECIFICATIONS	4

1. BUYER RECOMMENDATIONS

- Unpack the device carefully. Make sure there are no accessories left in the box. Check up the device for damage; if the product was damaged during transportation, address the firm which carried out the delivery; if the product functions incorrectly, address the dealer at once.
- Check up the package contents and availability of the warranty card. Make sure the warranty card has a shop stamp, a legible signature or the seller’s stamp and purchase date, and the goods number corresponds to that in the warranty card. Remember: in case of warranty card loss or discrepancy of numbers you forfeit the right for warranty repairs.
- Do not switch on the speaker system immediately after you bring it into a room from environment with negative temperature! After unpacking, the speaker system should be kept in conditions of room temperature for at least 4 hours.
- Before installing and using the speaker system, read this Manual carefully and keep it for future reference.

Technical support is on www.sven.fi.

2. PACKAGE CONTENTS

- Speakers – 2 pcs
- 5V DC adapter – 1 pc
- Operation Manual – 1 pc
- Warranty card – 1 pc

3. SAFETY PRECAUTIONS

- Do not open the multimedia speaker system (MSS) and do not perform repairs by yourself. Service and repairs should be performed by qualified specialists only in an authorized service center. The list of authorized service centers is available on www.sven.fi.
- Do not put foreign objects inside holes of the MSS.
- Protect the MSS against high humidity, ingress of splashes and drops of water as well as dust on the device; do not place any vessels with liquids on it.
- Protect the MSS against heating: do not place it closer than 1 m from a heat source. Do not expose it to direct sunlight.
- Do not place open flame source close to speakers or directly on them.
- Do not use any chemical agents for cleaning. Clean it with dry soft cloth only.


4. TECHNICAL DESCRIPTION

Sven 280 multimedia speaker system (MSS) is designed to playback music and sound games, movies, etc. The MSS is equipped with a built-in amplifier, audio and signal cables, due to which it can be connected to a PC, laptop, MP3 or CD player or other audio sources. The speaker with an audio input and control panel is named the active one.

Special features

- Speaker system is compatible with PCs, DVD/Media-players, mobile devices and other sound sources
- Built-in signal cable with 3.5 mm mini-jack to connect sound sources
- Volume control
- Headphones jack
- Black glossy front panel
- Aluminium diffusers
- Tilt angle adjustment
- Wall mountability
- Plastic case of speakers

Control panel

- ① POWER: power switch
- ② Power LED
- ③ : headphones out
- ④ VOLUME: volume control knob

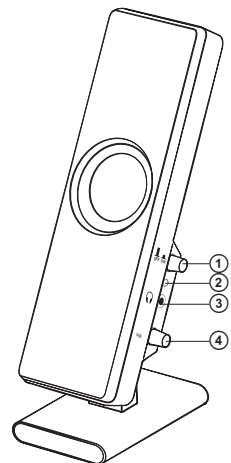


Fig. 1. Control panel

5. PREPARATION AND OPERATION

Speaker placement

- Place the speakers symmetrically to the listener at a distance of not less than one meter.

MSS Connecting

Sven 280 speaker system can be connected virtually to any audio device: MP3 / CD player, PC sound card, etc. (see connection diagram, Fig. 2).

- Before connecting, make sure that the MSS is unplugged.
- Connect the plug of the signal cable built into the active speaker to the output jack of sound card of your PC, MP3 or CD player, etc, see Fig. 2. Use mini-jack to 2RCA adapter (not included) to connect a DVD player, TV-set etc.
- Connect the USB power cord to a USB port of your PC, laptop or to USB port of 5V DC adapter (included) connected to the mains ~220 V (see Fig. 2).
- Set volume level to minimum by turning VOLUME knob ④, switch on POWER switch ① on the active speaker. Power LED ② will light up.
- Adjust volume with the VOLUME knob ④ to the necessary level.
- Connect your headphones to the headphones jack ③ (see Fig. 1).

Notes. After finishing using the MSS, mind to switch it off with the POWER switch ①. To improve sound quality, use Line-Out output of the sound card.

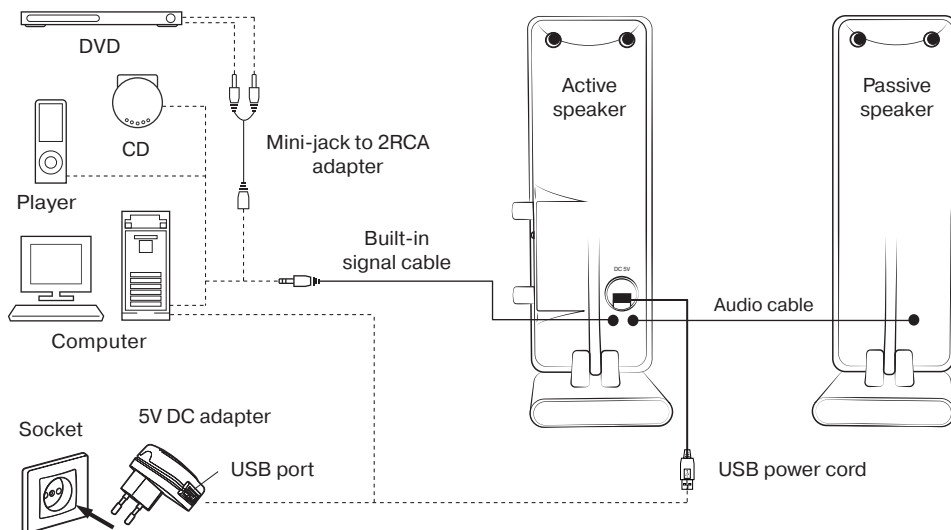


Fig. 2. Connection diagram

6. TROUBLESHOOTING

Problem	Cause	Solution
The MSS does not turn on.	The MSS is not connected to the mains.	Check the connection to the mains.
	The power switch is off.	Turn on the switch.
No sound.	The volume level is set to minimum value.	Adjust the volume control knob.
	Audio source is connected incorrectly.	Connect audio sources correctly.
Too low sound on speakers.	The volume level is set to minimum value.	Adjust the volume control knob.
Distortion of sound.	Large amplitude of the input signal.	Reduce the input signal value using volume controls on signal sources and MSS.

If none of the above methods can solve a problem, please seek professional advice at your nearest service center. Never attempt to repair the product by yourself.

7. TECHNICAL SPECIFICATIONS

Parameter, measurement unit	Value
Output power (RMS), W	5 (2 × 2.5)
Frequency response, Hz	100 – 20,000
Speaker diameter, mm	Ø 45
Power	USB / DC 5V or ~220 V/50 Hz
Dimensions (one speaker) (W × H × D), mm	58 × 205 × 87
Weight, kg	0.55

Notes:

- **Technical specifications given in this table are supplemental information and cannot give occasion to claims.**
- **Technical specifications and package contents are subject to change without notice due to the improvement of SVEN production.**

2.0 Multimedia Speaker System

SVEN®
YOU WANT – WE CAN



Модель: SVEN-280

Импортер в России: ООО «СКАНДИТРЕЛ», 111024, РФ, г. Москва, ул. Авиамоторная, д. 65, стр. 1.

Уполномоченная организация в России: ООО «РТ-Ф», 105082, г. Москва, ул. Фридриха Энгельса, д. 75, стр. 5.

Условия гарантийного обслуживания смотрите в гарантийном талоне или на сайте www.sven.fi.

Гарантийный срок: 12 мес.

Срок службы: 2 года.

Производитель: «СВЕН ПТЕ. Лимитед»,

176 Джу Чиат Роуд, № 02-02, Сингапур, 427447.

Произведено под контролем «Свен Скандинавия

Лимитед», 48310, Финляндия, Котка,

Котлахдентие, 15. Сделано в Китае.

Manufacturer: SVEN PTE. LTD, 176 Joo Chiat Road, № 02-02, Singapore, 427447. Produced under the control of Oy Sven Scandinavia Ltd. 15, Kotolahdentie, Kotka, Finland, 48310. Made in China.

© Registered Trademark of Oy SVEN Scandinavia Ltd. Finland.

SVEN 280