

SVEN®
YOU WANT – WE CAN

2.0 Multimedia Speaker System

OPERATION MANUAL



STREAM R
STREAM
MEGA R

www.sven.fi

Operation Manual

STREAM R STREAM MEGA R

Congratulations on your purchase of the Sven speaker system!

COPYRIGHT

© 2014. SVEN PTE. LTD. Version 1.0 (V 1.0).

This Manual and information contained in it are copyrighted. All rights reserved.

TRADEMARKS

All trademarks are the property of their legal holders.

NOTICE OF RESPONSIBILITY RESTRICTION

Despite the exerted efforts to make this Manual more exact, some discrepancies may occur. The information in this Manual is given on “as is” terms. The author and the publisher do not bear any liability to a person or an organization for loss or damage which has arisen from the information contained in this Manual.

CONTENTS

1. BUYER RECOMMENDATIONS	1
2. PACKAGE CONTENTS.....	2
3. SAFETY PRECAUTIONS	2
4. TECHNICAL DESCRIPTION	2
5. PREPARATION AND OPERATION	5
6. TROUBLESHOOTING.....	6
7. TECHNICAL SPECIFICATIONS	7

1. BUYER RECOMMENDATIONS

- Unpack the device carefully. Make sure there are no accessories left in the box. Check up the device for damage; if the product was damaged during transportation, address the firm which carried out the delivery; if the product functions incorrectly, address the dealer at once.
- Check up the package contents and availability of the warranty card. Make sure the warranty card has a shop stamp, a legible signature or the seller’s stamp and purchase date, and the goods number corresponds to that in the warranty card. Remember: in case of warranty card loss or discrepancy of numbers you forfeit the right for warranty repairs.
- Do not switch on the speaker system immediately after you bring it into a room from environment with negative temperature! After unpacking, the speaker system should be kept in conditions of room temperature for at least 4 hours.
- Before installing and using the speaker system, read this Manual carefully and keep it for future reference.

Technical support is on www.sven.fi.

2. PACKAGE CONTENTS

- Speakers– 2 pcs
- 2RCA to mini-jack (Ø 3.5 mm) signal cable – 1 pc
- 2RCA to 2RCA signal cable – 1 pc
- Audio cable – 1 pc
- Remote control – 1 pc
- Battery (installed in the remote control) – 1 pc
- Operation manual – 1 pc
- Warranty card – 1 pc

3. SAFETY PRECAUTIONS



Caution! High voltage inside! To avoid the risk of electric shock do not open or touch elements inside.

- To avoid electric shock, do not open the MSS and do not perform repairs by yourself. Service and repairs should be performed only by qualified specialists in an authorized service center. The list of authorized service centers is available on www.sven.fi.
- Do not allow the circuit of wires (including the grounded ones) between the speakers, on the power amplifier or the ground, for it causes damage to the power amplifier output stage.
- Do not touch the MSS power cord plug pins for 2 seconds after unplugging it from the mains.
- Disconnect MSS from the mains system during a fuse replacement. Use fuses of the same type and rated value. Do not use hand-made fuses.
- Do not put foreign objects inside the holes of the MSS.
- Protect the MSS from high humidity, water and dust.
- Protect the MSS from heating: do not place it closer than 1 m from a heat source. Do not expose it to direct sunlight.
- Do not place any open flame sources on or close to MSS.
- Do not place the MSS in poorly ventilated areas. Leave an air gap of 10 cm or more. When operating the MSS, do not put any devices on it, do not cover it with cloth or other objects preventing it from cooling.
- Do not use any chemical agents for cleaning. Clean it with dry soft cloth only.

4. TECHNICAL DESCRIPTION

STREAM R/STREAM MEGA R 2.0 Multimedia Speaker Systems (MSS) are designed to play music and sound games, movies, etc. You can use it with a computer, CD/MP3 player and other audio devices. Remote control (RC) is included.

Special features

- Monitor speaker system
- Three switchable inputs
- Front panel controls
- Headphone jack
- Active crossover
- Separate HF and LF amplifiers for each drive
- Remote control

Operation Manual

STREAM R STREAM MEGA R

Description of the control panels

- ① LINE IN: line audio input jack
- ② LED: power LED
- ③ TREBLE: treble control knob
- ④ BASS: bass control knob
- ⑤ VOLUME: volume control knob
- ⑥ IR: IR receiver
- ⑦ Headphone jack
- ⑧ AUDIO IN L1/R1: stereo input 1
- ⑨ AUDIO IN L2/R2: stereo input 2
- ⑩ SPEAKER OUT: passive speaker input jack
- ⑪ FUSE 2A: fuse
- ⑫ POWER ON/OFF: power switch
- ⑬ Power cord

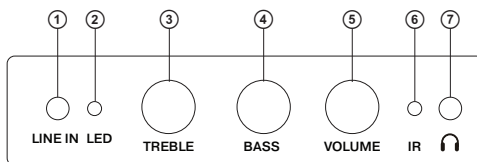 


Fig. 1. Active speaker front panel

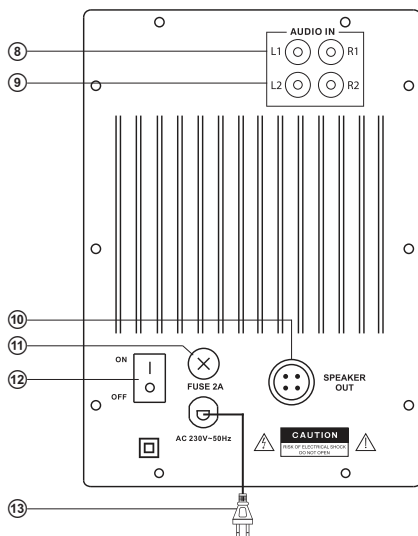 


Fig. 2. STREAM R active speaker rear panel

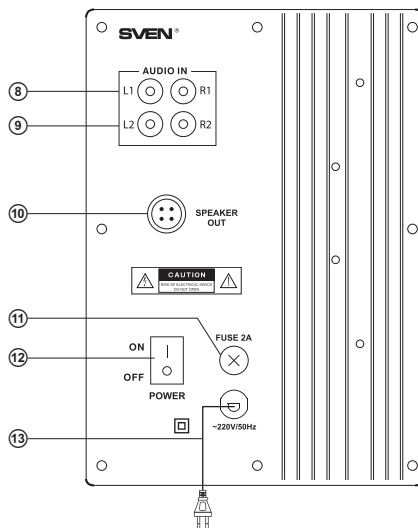 


Fig. 3. STREAM MEGA R active speaker rear panel

Remote control

- ① ST-BY: standby mode on/off button
- ② LINE IN: line audio input selection button
- ③ AUX: stereo input 1 selection button
- ④ VOL+: volume up button
- ⑤ L/R: left/right channel balance adjustment buttons
- ⑥ VOL-: volume down button
- ⑦ TREBLE+/-: treble level control buttons
- ⑧ RESET: return to default settings
- ⑨ PC: stereo input 2 selection button
- ⑩ MUTE: sound on/off button
- ⑪ BASS+/-: bass level control buttons

Notes:

- **Before operating the remote control (RC), extract the battery, remove the protective film, and insert the battery back into the remote control.**
- **Use the RC at an angle no more than 30°, no more than 7 m away from the IR receiver.**
- **Direct the RC at the IR receiver sensor on the active speaker.**
- **If the RC is not working, check the battery and replace the discharged battery with a new one.**
- **Remove the battery from the remote control if the device is left unused for a long period of time (more than a week).**

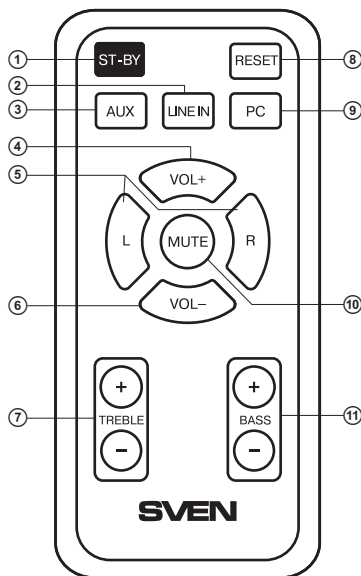 


Fig. 4. Remote control

5. PREPARATION AND OPERATION

Speaker placement

- Place the speakers symmetrically to the listener at least one meter away.
- Place MSS far away from monitors and TV sets, as insignificant image distortion in these supersensitive devices is possible.

Installation and operation

- STREAM R/STREAM MEGA R Multimedia Speaker Systems can be connected to virtually any audio source: DVD/CD/MP3 player, TV, PC sound card, etc. (see connection diagrams in Fig. 5a and 5b).
- Before making any connections, make sure the MSS is unplugged. Connect the speakers using the included audio cable (see connection diagrams in Fig. 5a and 5b).
- To connect the MSS to a CD/MP3 player or a PC sound card, use the included 2RCA to mini-jack signal cable. Connect the RCA jacks of the cable to the AUDIO IN L1/R1 (8) jack, and insert the mini-jack of the cable into the Ø 3.5 mm stereo jack of your audio source.
- To connect the MSS to a DVD player or TV, use a 2RCA to 2RCA stereo signal cable (included). Insert the RCA jacks of the cable into the AUDIO IN L2/R2 (9) jacks, and connect the other RCA jacks to the audio output jacks of your TV or DVD player.

Operation Manual

STREAM R STREAM MEGA R

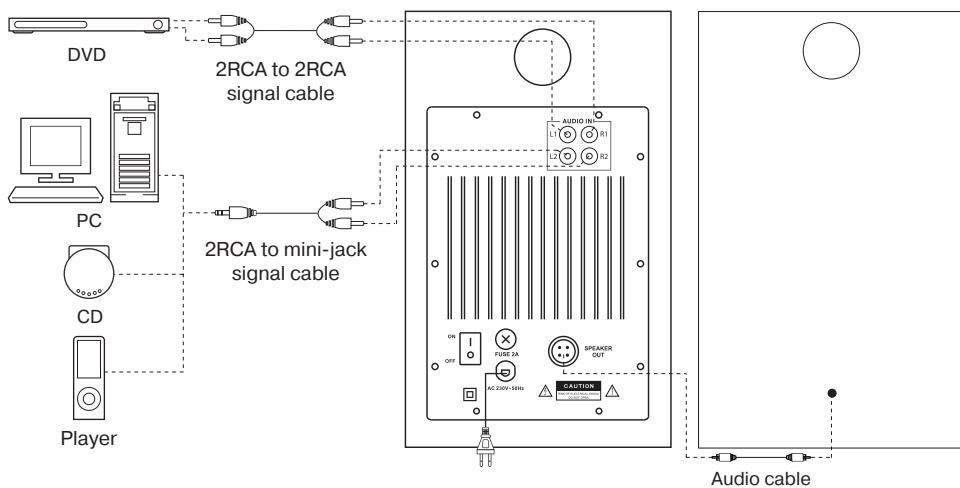 


Fig. 5a. STREAM R connection diagram

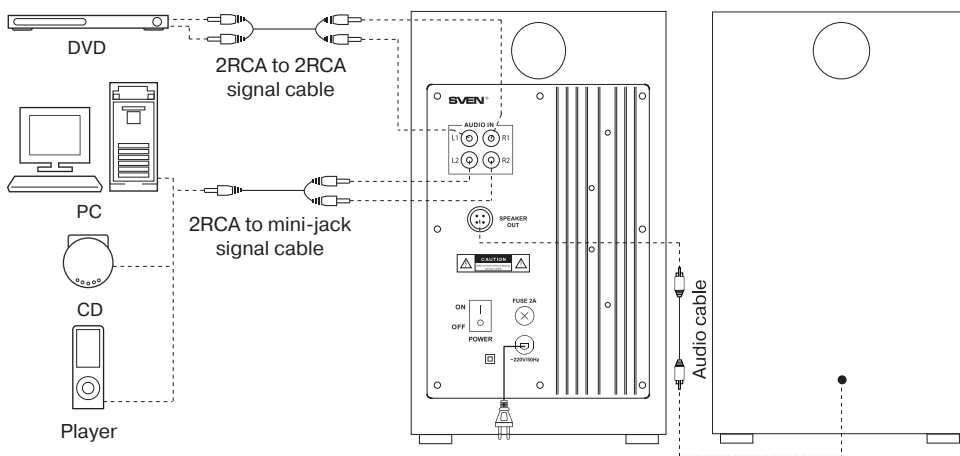 


Fig. 5b. STREAM MEGA R connection diagram

- Insert the power cord plug ⑬ into the mains outlet.
- Switch on the device using the POWER switch (⑫, ON position) on the rear panel of the active speaker. The power LED ② will light up. Switch on your audio source, press the ST-BY ① button or turn the VOLUME knob ⑤ on the speaker and then select the connected audio source with buttons AUX ③, LINE IN ② or PC ④ on the remote control.
- Adjust the master volume by turning the VOLUME ⑤ knob or pressing the VOL+ ④ and VOL- ⑥ buttons on the remote control. To increase the volume, turn the VOLUME ⑤ knob clockwise, to reduce the volume, turn the knob counterclockwise.
- Adjust the treble and bass level by turning the TREBLE ③ and BASS ④ knobs respectively or pressing the TREBLE+/- ⑦ and BASS+/- ⑩ buttons on the remote control. To increase the treble and bass level, turn the knobs clockwise; to reduce it, turn the knobs counterclockwise.
- Using buttons L/R ⑤, adjust the balance between left and right channels.
- To enter the MUTE mode, press the MUTE ⑩ button on the RC. To exit the MUTE mode, press this button again.
- Connect your headphones to the headphone jack ⑦.

Notes:

- **If the MSS is left unused for a long period of time, please mind to switch it off with the POWER ⑫ switch on the rear panel of the active speaker (OFF position) and unplug the power cord ⑬.**
- **Though the MSS has three switchable inputs, you can turn on only one audio source at a time.**
- **To improve the sound quality, use the Line Out port of your sound card.**

6. TROUBLESHOOTING

Problem	Cause	Solution
The MSS does not turn on.	The MSS isn't connected to a mains outlet.	Check the connection.
	The power switch is off.	Turn on the switch.
No sound or the sound is too quiet.	Volume level is set at minimum value.	Adjust the volume control knob.
	Improperly connected audio source.	Connect the audio sources correctly.
Distortion of sound.	Large amplitude of the input signal.	Turn down the source volume and the MSS volume.
The remote control is not working.	The battery is discharged.	Replace the battery with a new one.

If none of the above methods can solve the problem, please seek professional advice at your nearest service center. Never attempt to repair the product yourself.

7. TECHNICAL SPECIFICATIONS

Parameter, measurement unit	STREAM R	STREAM MEGA R
Output power (RMS), W	90 (2 × 45)	120 (2 × 60)
Frequency response, Hz	40 – 27 000	35 – 27,000
Speaker diameter, mm tweeter woofer	Ø 25 (dome) Ø 133	Ø 25 (dome) Ø 165.1
Power supply, V/Hz	~220/50	~220/50
Dimensions (W × H × D), mm	220 × 310 × 185	255 × 360 × 225
Weight, kg	9.1	12.94

Notes:

- *Technical specifications given in this table are supplemental information and cannot give occasion to claims.*
- *Technical specifications and package contents are subject to change without notice due to the improvement of SVEN production.*

2.0 Multimedia Speaker System

SVEN®
YOU WANT – WE CAN



Модели: **Stream R/Stream Mega R**

Импортер в России: ООО «СКАНДИТРЕЛ», 111024, РФ,
г. Москва, ул. Авиамоторная, д. 65, стр. 1.

Уполномоченная организация в России: ООО «РТ-Ф»,
105082, г. Москва, ул. Фридриха Энгельса, д. 75, стр. 5.

Условия гарантийного обслуживания смотрите
в гарантийном талоне или на сайте www.sven.fi.

Гарантийный срок: 12 мес.

Срок службы: 5 лет.

Производитель: «СВЕН ПТЕ. Лимитед»,
176 Джу Чиаг Роуд, № 02-02, Сингапур, 427447.

Произведено под контролем «Свен Скандинавия
Лимитед», 48310, Финляндия, Котка,
Котolahdentie, 15. Сделано в Китае.

Manufacturer: SVEN PTE. LTD, 176 Joo Chiat Road,
№ 02-02, Singapore, 427447. Produced under the
control of Oy Sven Scandinavia Ltd. 15, Kotolahdentie,
Kotka, Finland, 48310. Made in China.

© Registered Trademark of Oy SVEN
Scandinavia Ltd. Finland.

STREAM R
STREAM
MEGA R